



POWERBANK

Instructions for Model PO540




LED Power Display

To show the real-time power status of the powerbank, lightly press the control button once, and the LED screen will display the percentage of power. After the power is used up, the output will automatically turn off.

Power Charging Specification	
Type-C Input	DC 5V=3A/9V=2A/12V=1.5A
Type-C Output	DC 5V=3A/9V=2.2A/12V=1.67A/10V=2.25A
Type-C Cable Output	DC 5V=3A/9V=2.2A/12V=1.67A/10V=2.25A
Lightning Cable Output	DC 5V=2.4A/9V=2.2A
Wireless Charging	5W / 7.5W / 10W / 15W

Controls

- ① ON/OFF
- ② LED Power Display
- ③ Type-C Input/ Type-C Output
- ④ Wireless Charging Output
- ⑤ Type-C Cable Output
- ⑥ Lightning Cable Output

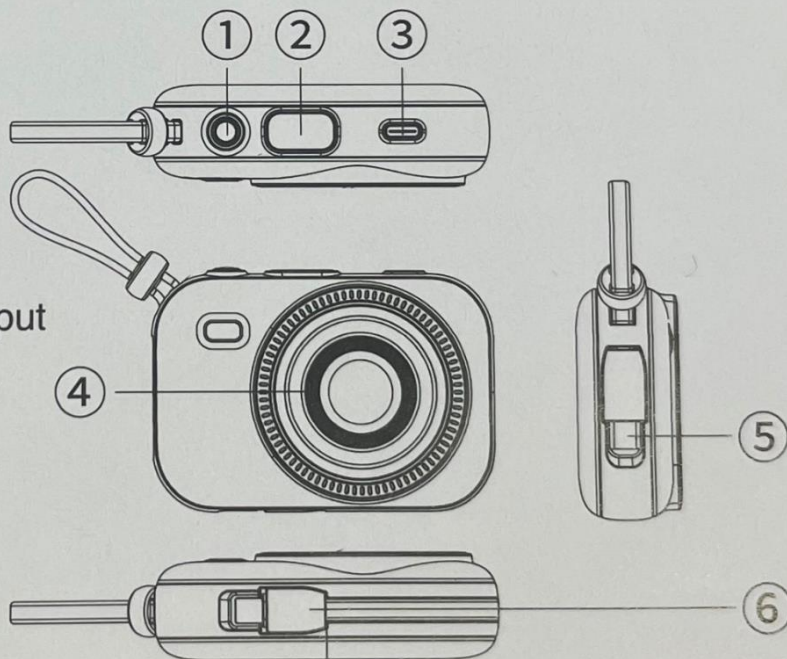

Power Bank Supply Power For Other Devices

Use the C to C or C to Lightning cable to charge the devices you need. Take out the built-in cable of Powerbank and insert it into the corresponding port of the device that needs to be charged (note that the corresponding port needs to be correct to automatically recognize and charge the device). Place the device that supports wireless charging in the position of the wireless charging output.

Pennine Leisure Supplies Unit 2, Copley Valley Business Park,
Copley Valley Road Sowerby Bridge HX6 2WA