

Opening Mechanism

for installation in the frame of the **VisionStar M** rooflight
400 × 400 mm roof opening



Mechanism 490.23



EN Installation and Operating Instructions

Please read the instructions carefully before installing the rooflight and store it for future.



We cannot be held responsible for incorrect fitting, handling or operation.
Any product faults relating to the production and materials used should be notified to us via an authorised dealer immediately.

Included with delivery

1x locking slider left and right
1x operating handle
2x plastic splint pins for lifting axis

Recommended tools for installation (additional):

Torx-angle screwdriver T15

Erklärung der Symbole



NOTE

Particularly important information.



ATTENTION!


Non-observance can lead to material damage.



WARNING!

Safety note: Serious risk of injury.


Installation

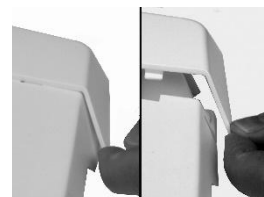

First, remove the two side covers to access the screws.



Unscrew all screws and carefully pull the inner frame downward.

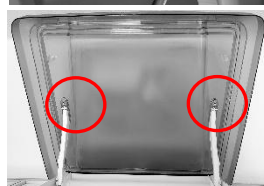

The operating handle is fastened to the two side locking sliders.


Unscrew the two screws before opening the rooflight.

Open the rooflight.



Remove the two plastic split pins connecting the glass dome and the lifter arms.

Leave the lifter arms in this position to prevent the glass dome from snapping shut.

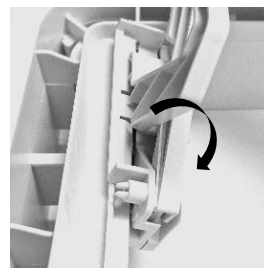


Pull the operating handle upward and remove it.



Unclip the locking sliders:

- Move each locking slider to the highest position on the guide rail.
- Carefully turn the slider inward until it disengages.

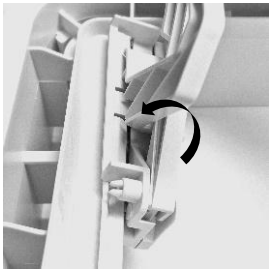

Position the new locking sliders at the highest position on the guide rail. Carefully press them outward with a slight twisting motion until they audibly click into place.



Work evenly to avoid tilting or jamming.

Insert the new operating handle from above into the designated guide.



Position the lifter arms at the designated mounting points on the glass dome. Secure the connection using the two plastic split pins (flat side facing the glass).



Hold or support the glass dome during installation to prevent it from closing uncontrollably.



Close the rooflight and fasten the operating handle to the two locking sliders.




Reattach the inner frame from below and secure it using the original screws.

Position the side covers parallel to the roof so that the locking tabs engage in the corresponding holes in the frame.

Slide the covers toward the frame until they audibly click into place.

Operation

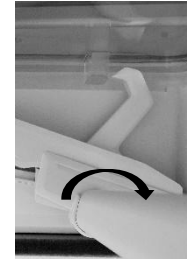

To open the rooflight, both pleated blinds must be open.

Grip the crossbar in the middle and turn it towards the opening side. Now the rooflight can be opened by pushing the crossbar. As soon as you release the crossbar the opening mechanism snaps into this position.

To close the rooflight, turn it again and push it back in the opposite direction. When the end position is reached, the rooflight is locked automatically.



- Keep the pleated blinds open while driving to avoid driving noise and damage from the airstream.
- To avoid heat accumulation do not close blind completely during the day. Open both pleats when not using the vehicle.

Warranty

The legal warranty applies.

Disposal

Dispose of packaging material and product in accordance with local legal regulations and regulations for the disposal of plastics.

MPK Metall- und
Plastikverarbeitung GmbH & Co. KG
Friedrich-Ebert-Str. 298-300
D-58566 Kierspe
mpk-rooflights.com