

**Please read this instruction manual carefully before installation and first use, and store it in a safe place. If you pass on the product to another person, hand over this instruction manual along with it.**

## Table of contents

|   |  |   |
|---|--|---|
| 1 | Explanation of symbols . . . . .               | 3 |
| 2 | Safety and installation instructions . . . . . | 4 |
| 3 | Scope of delivery . . . . .                    | 4 |
| 4 | Intended use . . . . .                         | 5 |
| 5 | Instructions before installation . . . . .     | 5 |
| 6 | Installing the inner frame. . . . .            | 5 |
| 7 | Warranty . . . . .                             | 6 |
| 8 | Disposal . . . . .                             | 6 |
| 9 | Technical data . . . . .                       | 7 |

## 1 Explanation of symbols



### **WARNING!**

**Safety instruction:** Failure to observe this instruction can cause fatal or serious injury.



### **NOTICE!**

Failure to observe this instruction can cause material damage and impair the function of the product.



### **NOTE**

Supplementary information for operating the product.

## 2 Safety and installation instructions

**Please observe the prescribed safety instructions and stipulations from the vehicle manufacturer and service workshops.**

The manufacturer accepts no liability for damage in the following cases:

- Damage to the product resulting from mechanical influences
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in the operating manual



### **WARNING! Beware of injury**

Disconnect the vehicle power supply before you begin and make sure it cannot be restarted.



### **NOTE**

If you do not have sufficient technical knowledge for installing components in vehicles, you should have a specialist install the inner frame in your vehicle.

Please note the following:

- If faults or disturbances occur, consult a specialist workshop immediately.
- Risk of breakage! Do not tread on the glass dome.
- Keep the roof light free of snow and ice.
- The electrical connections should only be performed by an electrician.
- Replace the defective lights using ones of the same type which have the same technical data (12 V, 5 W).

## 3 Scope of delivery

| No. in fig. <b>1</b> | Quantity | Description                  |
|----------------------|----------|------------------------------|
| 1                    | 10       | Ventilation grille           |
| 2                    | 4        | Lamp covers                  |
| 3                    | 16       | Fastening bolt Ø 2.5 x 12 mm |
| 4                    | 1        | Inner frame                  |

## 2 Safety and installation instructions

**Please observe the prescribed safety instructions and stipulations from the vehicle manufacturer and service workshops.**

The manufacturer accepts no liability for damage in the following cases:

- Damage to the product resulting from mechanical influences
- Alterations to the product without express permission from the manufacturer
- Use for purposes other than those described in the operating manual



### **WARNING! Beware of injury**

Disconnect the vehicle power supply before you begin and make sure it cannot be restarted.



### **NOTE**

If you do not have sufficient technical knowledge for installing components in vehicles, you should have a specialist install the inner frame in your vehicle.

Please note the following:

- If faults or disturbances occur, consult a specialist workshop immediately.
- Risk of breakage! Do not tread on the glass dome.
- Keep the roof light free of snow and ice.
- The electrical connections should only be performed by an electrician.
- Replace the defective lights using ones of the same type which have the same technical data (12 V, 5 W).

## 3 Scope of delivery

| No. in fig. <b>1</b> | Quantity | Description                  |
|----------------------|----------|------------------------------|
| 1                    | 10       | Ventilation grille           |
| 2                    | 4        | Lamp covers                  |
| 3                    | 16       | Fastening bolt Ø 2.5 x 12 mm |
| 4                    | 1        | Inner frame                  |

- Place the inner frame from inside onto the outer frame and align it centrally (fig. **6**).
- Secure the inner frame with the 16 fastening bolts (fig. **7**).  
Screw on the inner frame only slightly.
- Check that the roller blinds can move freely (fig. **8**).
- If they cannot move freely, loosen the screws slightly.
- Connect the power supply lines to an available socket (fig. **9**).
- Plug the cable carefully into the inner frame (fig. **10**).
- Check the function of the lighting (fig. **11**).
- Clip the light covers onto the short sides (fig. **12**).  
They need to click in.

**NOTICE!**

Do not use the ventilation grille to cover the lamps.

- If you do not want to use the lighting: Insert the ventilation grille into the openings.
- Clip the ventilation grille onto the long sides (fig. **13**).  
It needs to click in.

## 7 Warranty

The statutory warranty period applies. If the product is defective, please contact the service partner in your country (addresses on the back on the instruction manual).

Our experts will be happy to help you and will discuss the warranty process with you in more detail.

## 8 Disposal

- Place the packaging material in the appropriate recycling waste bins wherever possible.



If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.

## 9 Technical data

|                                     | Heki accessory      |
|-------------------------------------|---------------------|
| Ref. no.:                           | 9104100241          |
| Connection voltage of the lighting: | 12 V $\overline{=}$ |
| Power consumption of the lighting:  | 4 x 5 W             |