

Space Heater Mk 2, Mk 3 and Mk 4 (metal box enclosure)

Item		Available Spares															
No	Description	Space Heater	Burner and Electrode	Gas Train	Electric Element incl wiring	Main PCB	Communications PCB	Temperature Sensor	Overheat Stat	Motor assy	Air flow sensor	Control Panel(*)	Control Panel Surround	Wiring Harness Control	Wiring harness 230V	PCBA Fuse	Instructions
SC2212B	Ci-bus Underfloor Sh Mk2 G&e	AK1927	AK1261	AK1259	AK1258	AK1885	AK1887	AK1249	AK1949	AK1263	AK1267	AK1950	AK1857	-	AK1880	AK1219	181.272
SETSH2212A	Sh Uf 2kw G+e Set A	AK1933 AK1934	AK1261	AK1259	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1270	AK1954	AK1257B	AK1880	AK1219	181.272
SETSH2212D	Sh Uf 2kw G+e Set D	AK1933 AK1934	AK1261	AK1259	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1270	AK1954	AK1257B	AK1880	AK1219	181.272
SH2201	Space Heater Gas Only Mk2	AK1928 AK1929	AK1261	AK1259	-	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1269	AK1954	AK1256B	-	AK1219	181.275
SH2202	Space Heater Mk2 G&e	AK1930 AK1966	AK1261	AK1259	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1270	AK1954	AK1257B	AK1881	AK1219	181.275
SH2202B	Space Heater Mk2 G&e	AK1930 AK1966	AK1261	AK1259	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1270	AK1954	AK1257B	AK1880	AK1219	181.275
SH2211B	Underfloor Sh Gas Only Mk2	AK1931 AK1932	AK1261	AK1259	-	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1269	AK1954	AK1256B	-	AK1219	181.275
SH2212B	Underfloor Sh Mk2 G&e	AK1933 AK1934	AK1261	AK1259	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1270	AK1954	AK1257B	AK1880	AK1219	181.325
SH2212BR	Spaceheater Underfloor Mk2 G&e	AK1933 AK1934	AK1261	AK1259	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1263	AK1267	AK1270	AK1954	AK1257B	AK1880	AK1219	181.325
SH4312B	U/floor Sh Mk2 4kw G+e	AK1935 AK1936	AK1262	AK1260	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1247	AK1267	AK1273 AK1951 AK1952	AK1954 AK1857	-	AK1880	AK1219	181.221
SH4312BMH	Sh 4.0s G+e Mtrhme/bulk	AK1935 AK1936	AK1262	AK1260	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1247	AK1267	AK1273 AK1951 AK1952	AK1954 AK1857	-	AK1880	AK1219	181.221
SH4312MB	Pobs Sh 4.0s G+e Mtrhme/bulk	AK1935 AK1936	AK1262	AK1260	AK1258	AK1264 AK1885	-	AK1249	AK1949	AK1247	AK1267	AK1273 AK1951 AK1952	AK1954 AK1857	-	AK1880	AK1219	181.221
SH4412IB	Sh 4.3s G+e Iso / Bulk	AK1937 AK1938	AK1262	AK1260	AK1248	AK1265 AK1969	-	AK1249	AK1949	AK1247	AK1267	AK1273	AK1954	-	AK1880	AK1219	181.278
SH4412IR	Sh 4.3s G+e Iso / Return	AK1937 AK1938	AK1262	AK1260	AK1248	AK1265 AK1969	-	AK1249	AK1949	AK1247	AK1267	AK1273		-	AK1880	AK1219	181.278
SI4312B	U/floor Sh Mk2 4kw G+e Ivan	AK1939 AK1940	AK1262	AK1260	AK1258	AK1264 AK1885	AK1246	AK1249	AK1949	AK1247	AK1267	AK1290	AK1955	-	AK1880	AK1219	181.276
SI4312IB	Sh 4s G+e Iso / Bulk	AK1939 AK1940	AK1262	AK1260	AK1258	AK1264 AK1885	AK1246	AK1249	AK1949	AK1247	AK1267	AK1290	AK1955	-	AK1880	AK1219	181.276
SI4312IR	Sh 4s G+e Iso / Return	AK1939 AK1940	AK1262	AK1260	AK1258	AK1264 AK1885	AK1246	AK1249	AK1949	AK1247	AK1267	AK1290	AK1955	-	AK1880	AK1219	181.276
SI4412IR	Sh 4.3s G+e Ivan Iso / Return	AK1941 AK1942	AK1262	AK1260	AK1248	AK1265 AK1942	AK1246	AK1249	AK1949	AK1247	AK1267	AK1300	AK1955	-	AK1880	AK1219	181.278
SL4312IR	SI 4.0s G+e Lin/ Iso /returnn	AK1943 AK1944	AK1262	AK1260	AK1258	AK1264 AK1885	AK1948	AK1249	AK1949	AK1247	AK1267	-	-	-	AK1880	AK1219	181.277

(*) Note: other control panels might be suitable, please refer to control panel spares for reference.

This data is internal to Brunswick.