




COMPACT FOLDING TRAVEL IRON

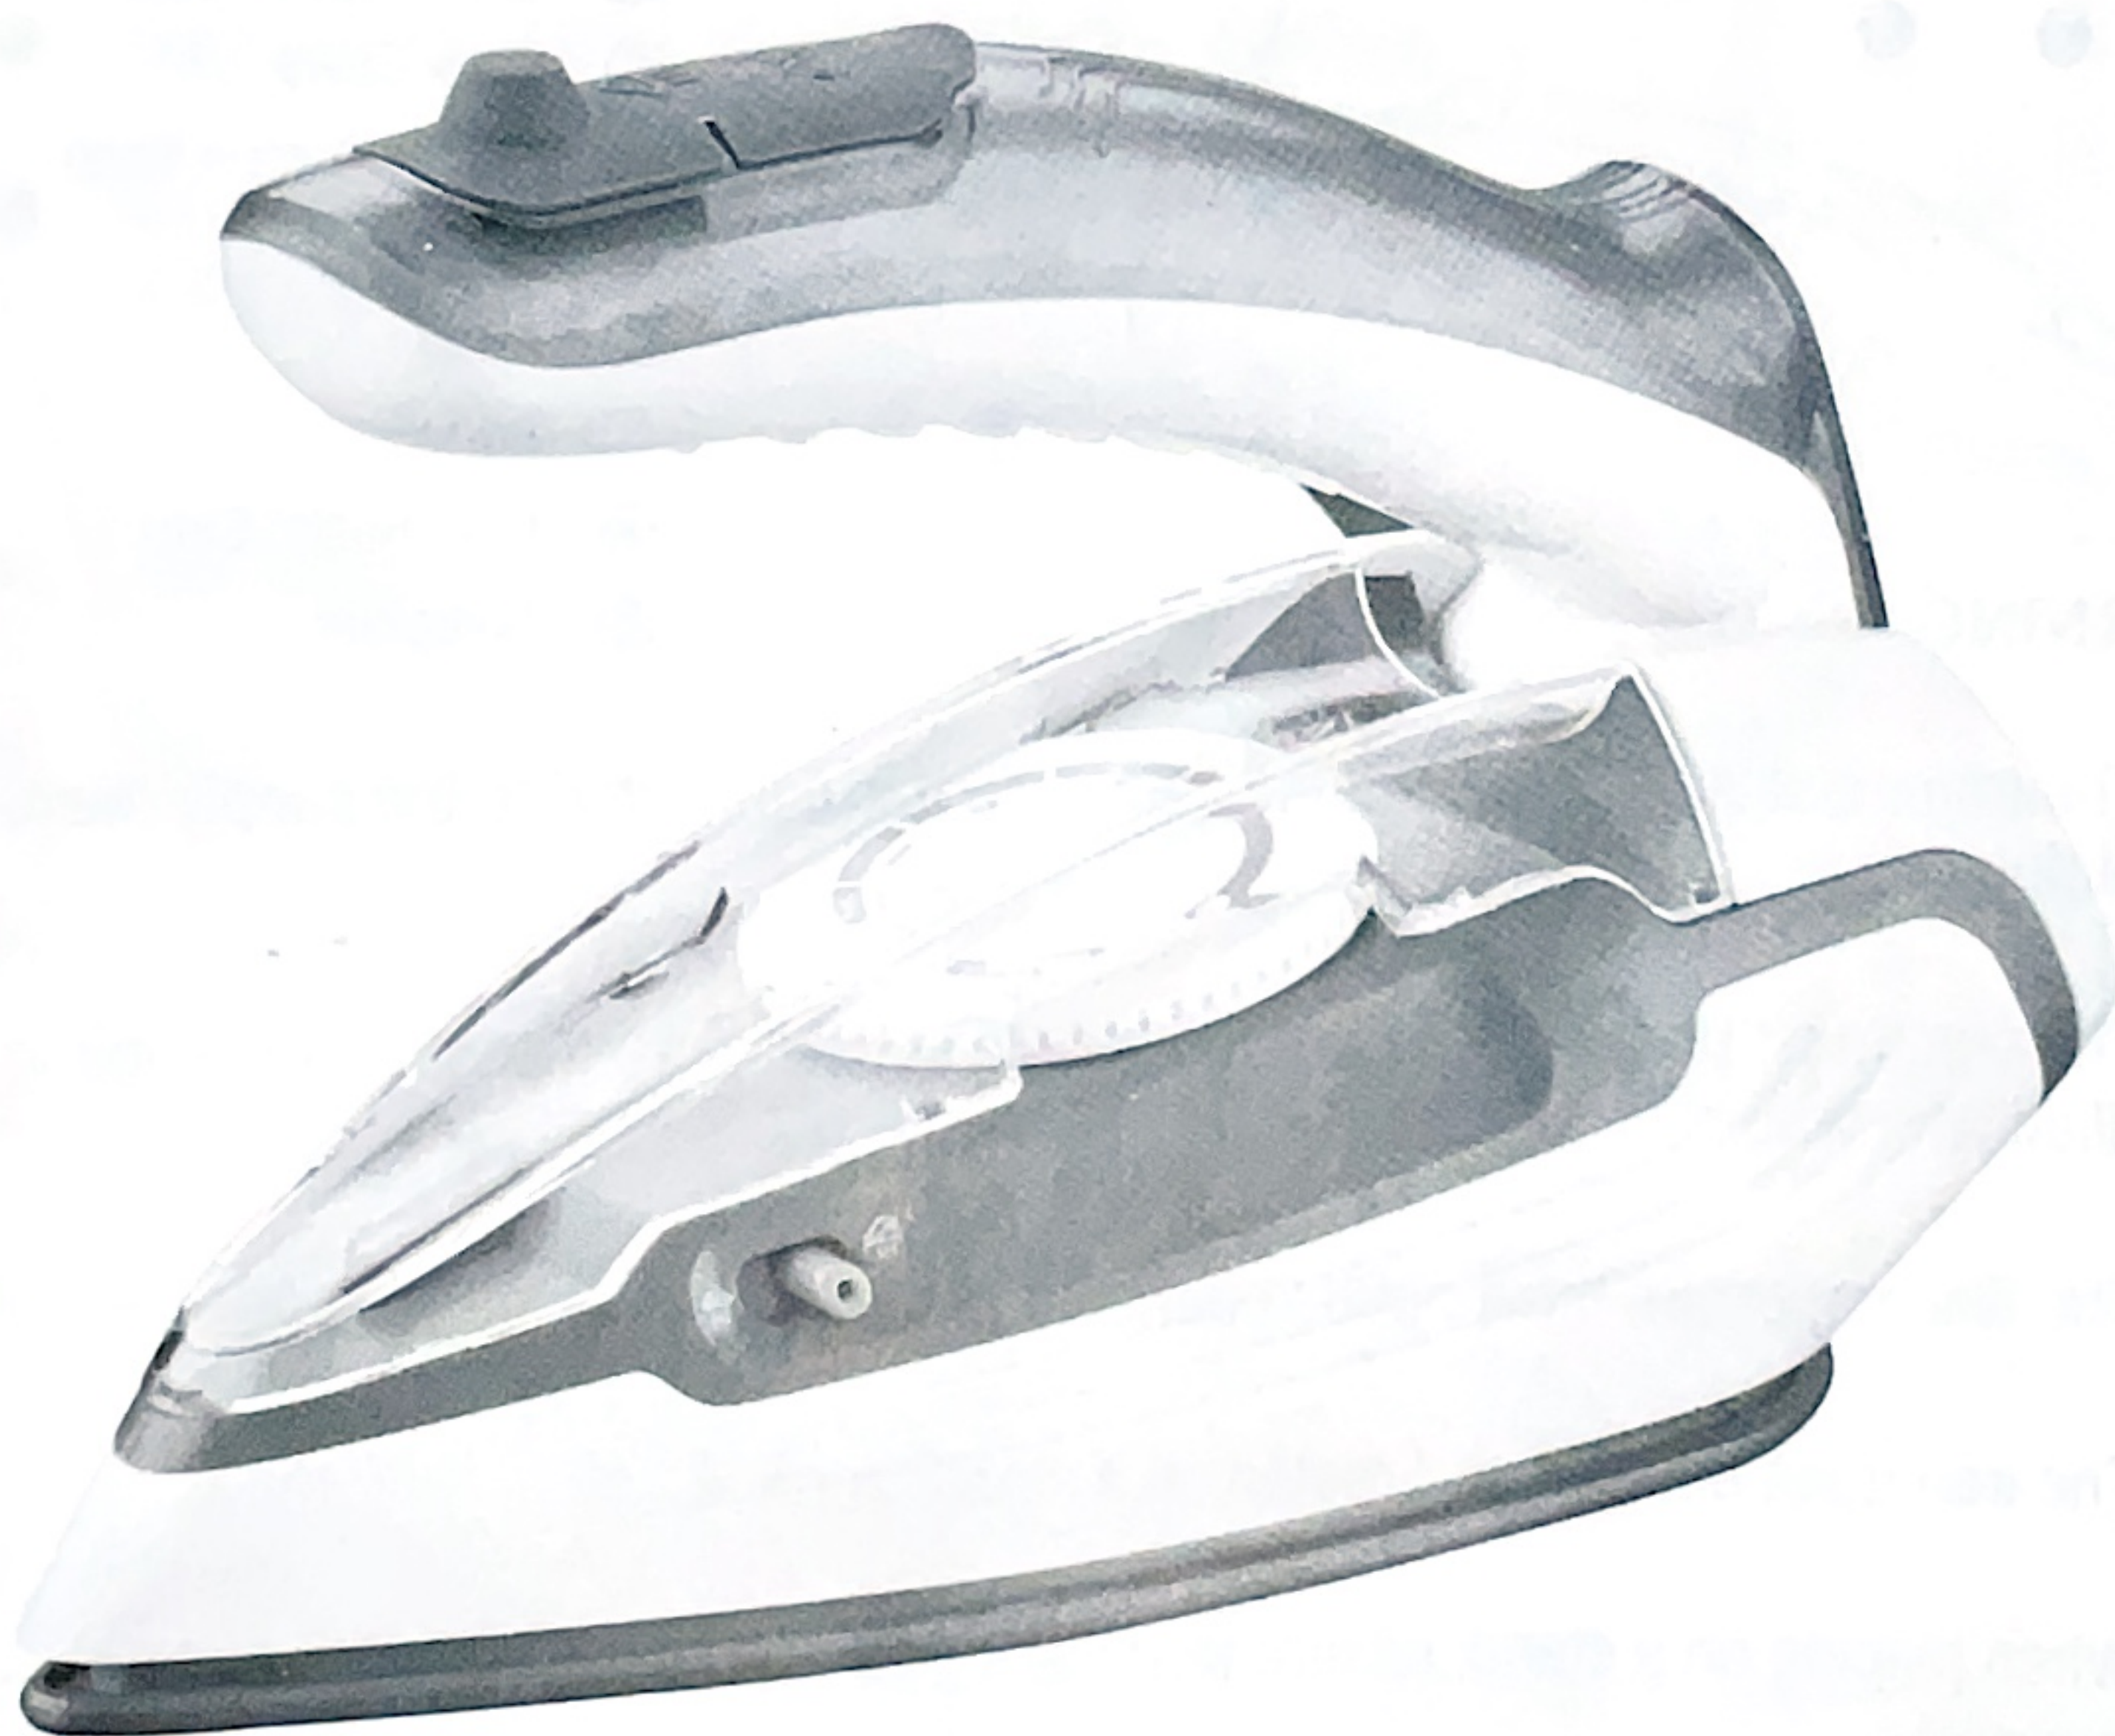


Model: ET810

220-240v

900-1100w



COMPACT FOLDING TRAVEL IRON

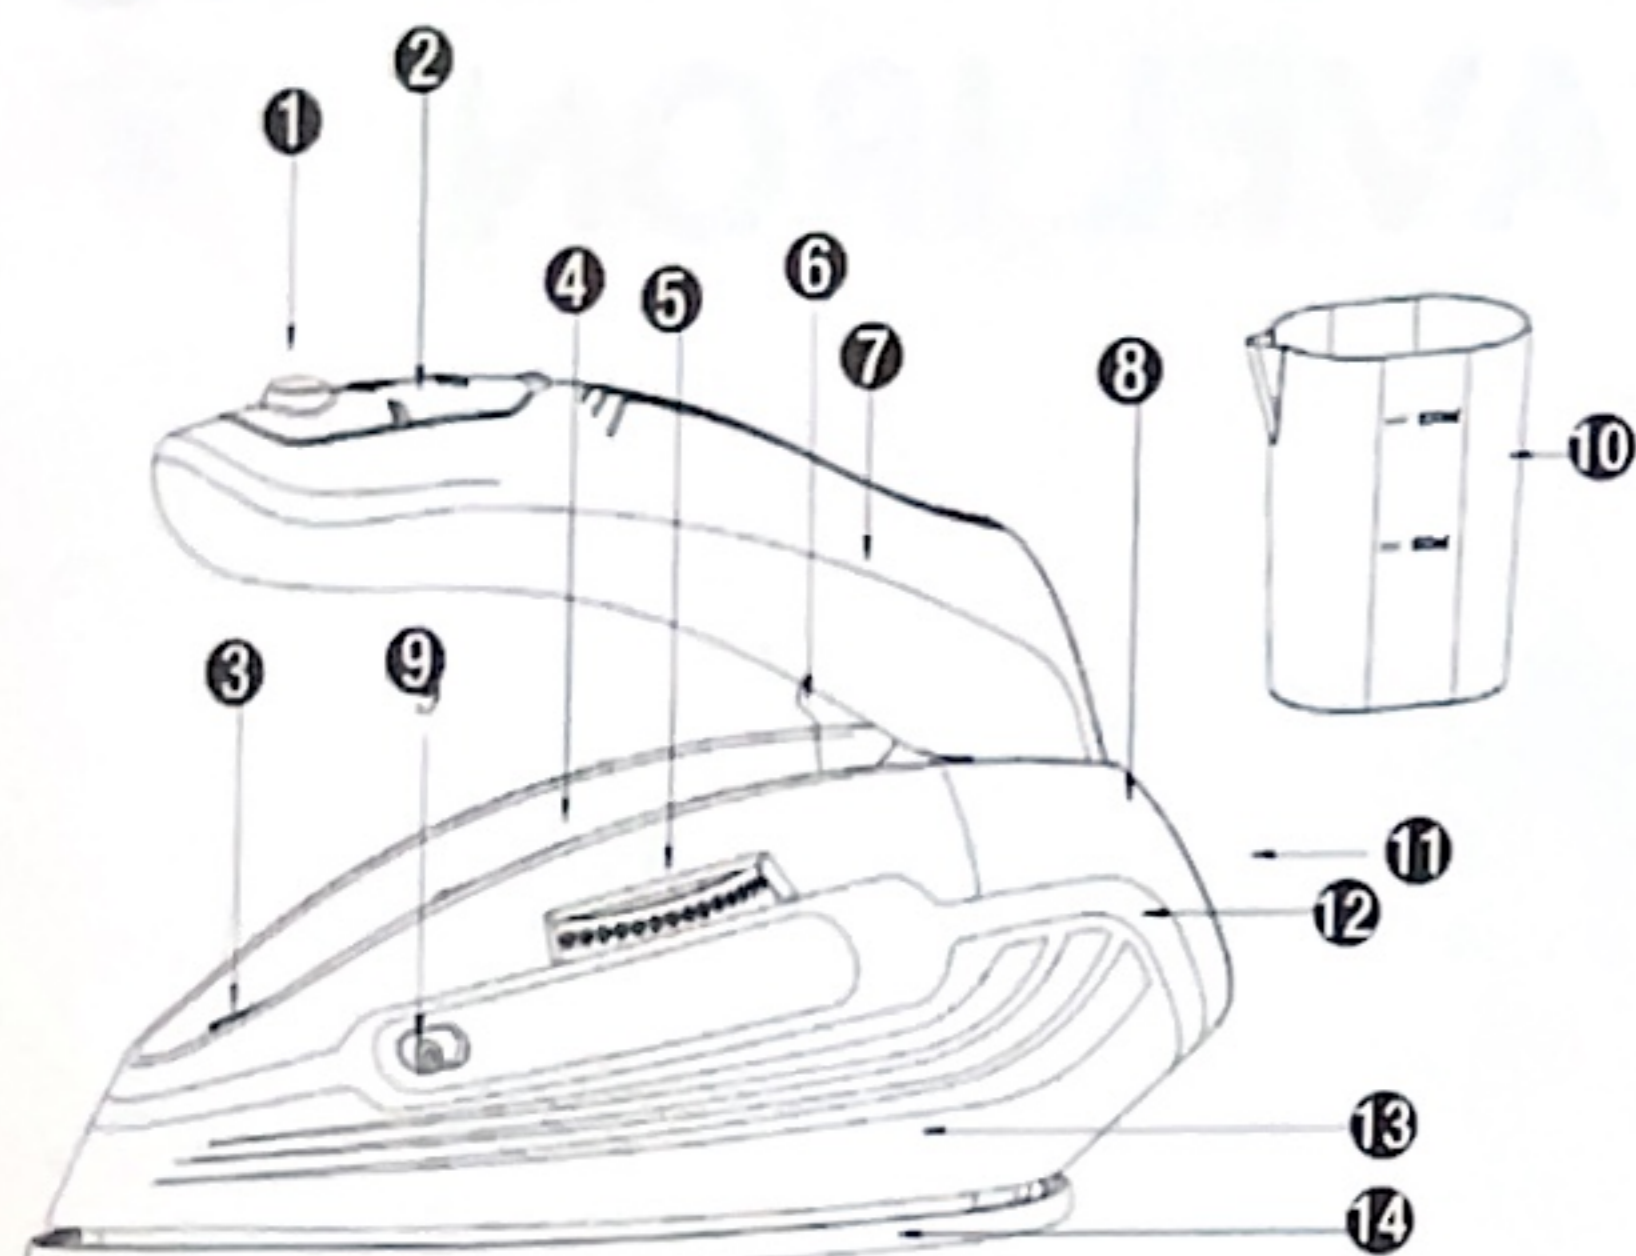

WARNING

- The iron must **NOT** be left unattended while it is connected to the supply mains supply.
- The plug must be removed from the socket outlet before the water reservoir is filled with water.
- The filling aperture must not be opened during use.
- The iron must be used and rested on a stable surface.
- When placing on a stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has any visible signs of damage or leaking.
- If the power cord is damaged, it **MUST** be replaced by the manufacturer or its service agent or a similarly qualified person in order to prevent hazard or shock.
- The appliance is **NOT** intended for use by children (It is **NOT** a Toy).

Model: ET810

- ❶ Burst Steam Button
- ❷ Water Inlet Cover
- ❸ Lamp Cover
- ❹ Body Cover Handle
- ❺ Thermostat Knob
- ❻ Cord Cover
- ❼ Wider Upper Cover
- ❽ Back Cover
- ❾ Steam Control Knob
- ❿ Beaker
- ⓫ Push
- ⓬ Body
- ⓭ Heat Resist Skirt
- ⓮ Soleplate

NOTE

- This appliance is for household use only. Use only for its intended use.
- **DO NOT** allow the power cord to touch hot surfaces, including the hot iron's soleplate.
- Please let the iron cool before putting away.
- To protect against the risk of shock, do not immerse the iron in water or other liquids.
- Keep this instruction manual for future reference.
- Remove any labels and stickers that may be attached to the soleplate of the iron **BEFORE** use.

FILLING WITH WATER

- Remove the mains plug from the electrical socket before filling.
- Please fill the appliance with normal tap water before using for the first time.
- Set the steam button to the "0" position and open the water inlet cover.
- Use the water beaker to fill with clean water into the water tank to "**MAX**" filling level.
- Push the water inlet cover until it is firmly closed.
- For refilling, you can use tap water. However if the water is very "Hard", it is advisable to use distilled water.
- Replace the water fill cover and dry any spilt water around the enclosure.
DO NOT OVERFILL.

SETTING THE TEMPERATURE

- Stand the iron on its heel, and plug the power cord into the electric socket. The power light will come on.
- Use the temperature knob, set the temperature to suit the type on material. We recommend using the table as a guide only. The temperature light indicates that the soleplate is heating up. When the light goes out the required temperature has been reached.

FABRIC	TEMPERATURE SETTING
NYLON / ACRYLIC / ACETATE	●
SILK / RAYON / POLYESTER	● ●
WOOL / COTTON	● ● ●
LINEN	MAX

DRY IRONING

- For dry ironing, turn the variable steam control knob all the way to the right to "0". This will cut off the steam flow if water is in the water tank.
- Press the temperature adjust button to select the desired fabric/temperature setting, put the iron on a smooth and stable place vertically.
- When the iron reaches the selected temperature you can begin to iron.

STEAM IRONING

- Ensure there is enough water in the water tank.
- Stand the iron on its end, insert the mains plug into the electric socket.
- Set the temperature adjust button at the required position within the steam area.
- When the iron reached the required selected temperature, you can start ironing.

STEAM IRONING *continued*

- **ATTENTION:** Never fill the iron with fabric conditioner, starches or any other solution. This will damage the steam mechanism. **DO NOT USE** contaminated water. We recommend distilled or demineralised water.
- **ATTENTION:** Never aim the iron at the face, towards yourself or anyone else while using or adjusting the steam, burns or serious injury may occur.

STRONG STEAM IRONING

- Make sure the water tank is at least half filled with water.
- When the iron temperature is set to steam setting, strong steam setting can be used.
- Press the burst steam button, the soleplate will spray out a strong steam.
- **ATTENTION:** Only use the steam press button when the steam iron has reached the steam or maximum temperature.
- **DO NOT** press the burst steam button more than 3 times at once. For optimal steam output, leave an interval of at least four seconds between pressing the steam button.
- The burst steam feature can be used with Dry or Steam ironing as desired.

VERTICAL SHOT OF STEAM

- When the iron temperature is set to steam setting, vertical steam can be used.
- Simply hold the iron vertically, positioned in front with a slight distance from the item to be steamed, and simply press the burst steam button.

continued overleaf

VERTICAL SHOT OF STEAM *continued*

- Steam may Stop when steam is on for several seconds, this is normal.
- **ATTENTION:** Never aim the iron at the face, towards yourself or anyone else while using or adjusting the steam, burns or serious injury may occur.

SELF CLEANING FUNCTION

- Use the self clean function once every two weeks. If the water in your area is very hard, the self clean function should be used more frequently.
- Make sure the iron is unplugged from the mains socket.
- Set the steam control knob to the "0" position.
- Fill the water tank to the maximum level.
- Plug the iron into the mains socket.
- Select the maximum ironing temperature.
- Unplug the iron when the temperature is reached.
- Hold the iron over the sink, press and hold the self clean button. Gently shake the iron to and fro.
- Release the self clean button after 10-15 seconds.
- Repeat the self clean process if the iron still contains a lot of impurities.

NOTE

- Steam and boiling water will come out of the soleplate, impurities and flakes will be flushed out.
- **DO NOT** push and hold the self clean button while ironing.

AFTERCARE AND CLEANING

- Before cleaning unplug the iron from the mains socket, allow the appliance to cool down completely, and then use a damp cloth. **DO NOT** immerse the iron in water or fluids.
- Regularly rinse the water tank with clean water, empty the water tank after cleaning.
- If you use spray starch, wipe the soleplate occasionally with a damp cloth, to prevent the build up of deposits.
- After use, disconnect the iron from the mains socket, and empty any remaining water from the water tank. Only store the iron after it has completely cooled down.
- **NEVER** use scouring pads, abrasive, chemical cleaners or solvents to clean the exterior or soleplate of the iron. Doing so will scratch and damage the surfaces