

Operation Instruction

Instruction for use

The rooflight can be opened fully by the handles, or in four different directions, so that the dome can be angled against driving weather conditions.

The flynet and the blind can be operated together or separately. To open the rooflight dome both have to be opened.

Free-air-flow



When closed there is a free airflow through the rooflight, which must be kept free at all times (see technical data page 5-7)

Before driving



IMPORTANT: All rooflights must be locked down before traveling and both roller blinds locked in the fully open position against the frame (see picture 10-11).

Make sure the flynet and the blind are in open position to avoid damage and noise by airflow.

Care Instructions

Cleaning



The rooflight should only be washed by hand, using a sponge with plenty of clean water to avoid scratching. Caustic detergents and solvents may attack the plastic and make it brittle or disintegrate.

For easier cleaning of the dome it can be removed from the frame by releasing the four screws holding the handle arms (models from March 2008, Torx TK9 screws (see picture 12), earlier models had cross recess screws).

Make sure that only the original screws are used when replacing the dome and that they enter the thread in the plastic correctly. Do not over-tighten.



Never remove the screws holding the dome and the handles together (see picture 12). These are secured by a torque screwdriver and should only be handled by an approved dealers.

To remove the inner frame for cleaning, with the flynet and blind attached, follow the reverse of the fitting instructions; removing covers and screws.

