


PCB CHANGE ATRLM080 to ATRLM088


When replacing the ATRLM080 PCB with ATRLM088 on certain models of caravans no modifications are required and it is a direct replacement, but due to the 88 pcb having an additional fuse they may be misaligned to the current labelling.

Rules to check.

- 1) if the vehicle has a Truma Combi or an Alde system then no modifications are required.
- 2) Double check this by checking the plugging on the harness, if pin J3'2 is unpopulated (see fig 1) then no modifications is required.

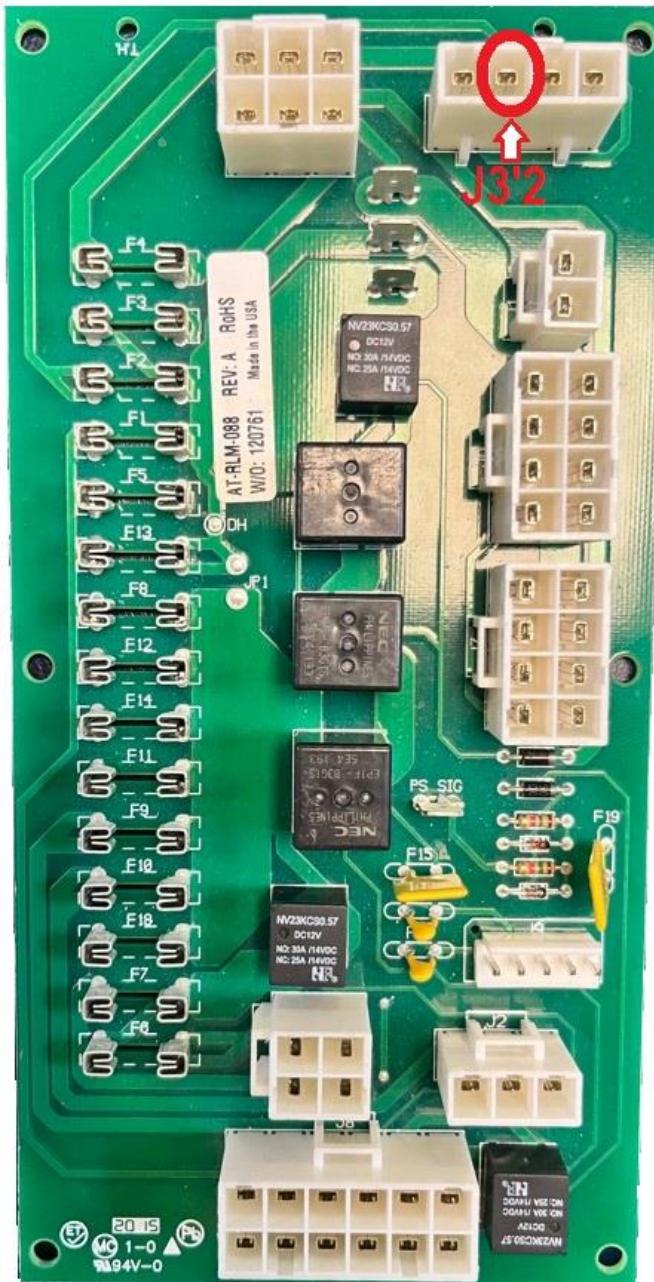

If a whale system is installed and pin J3'2 is populated, then modifications to the PCB is required (see fig 2)

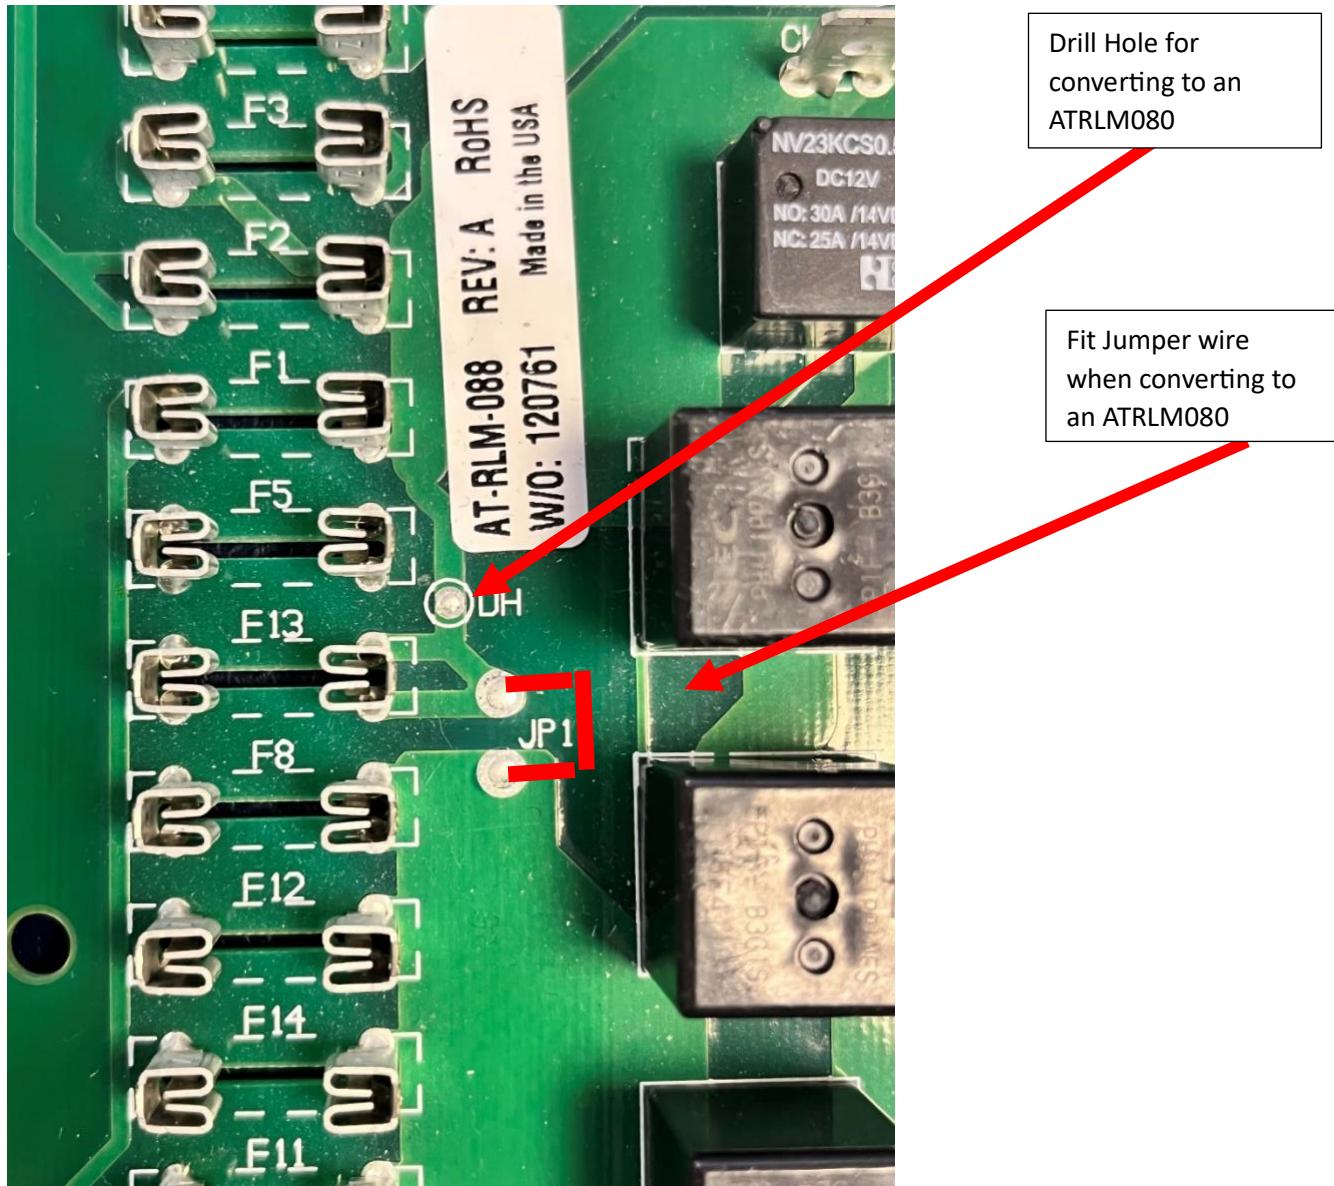

If this modification needs to be done this can be done at BCA.