






REW Window - Installation Manual

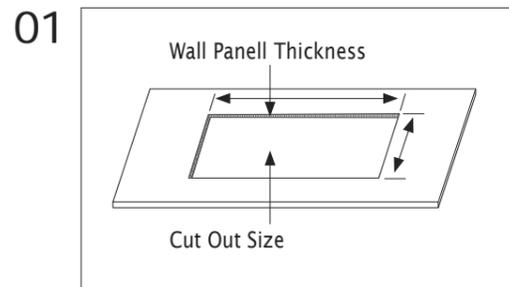

The wall thickness for window must be between 25–40mm.

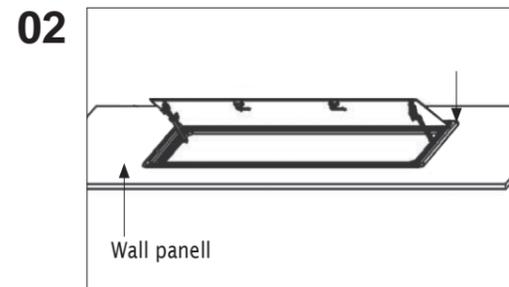

Apply silicone or foam type around window edge and then fit window onto wall. Recommendation:

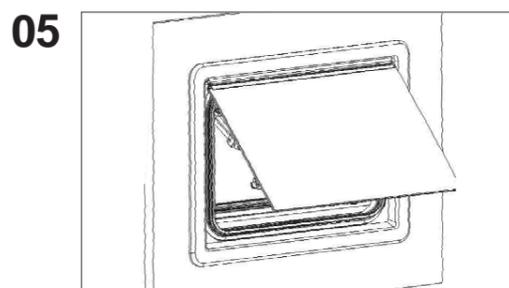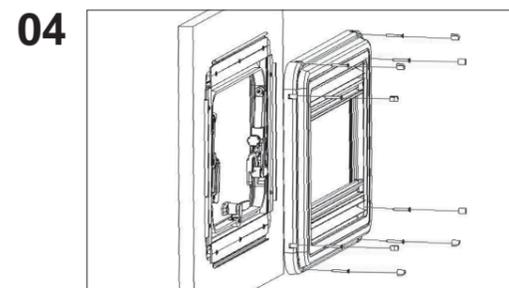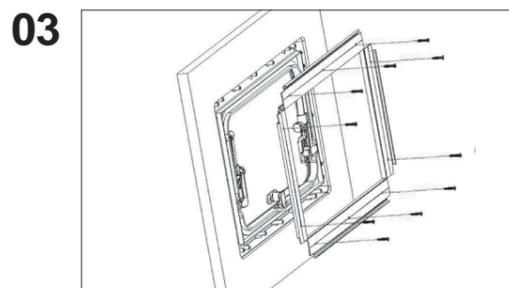

Final finished one.