


# Cold Water Starter Kit Instructions

Fresh water starter kit ideal for your van conversion, camper or motorhome.  
Kit includes

- LONDON Cold Water Folding Tap
- MAAS 10lt submersible pump
- 2 x 10 Litre Water Containers
- 2 Mtr 1/2 inch Internal diameter Water Hose
- 2 Mtr 3/4 inch Internal diameter Waste Hose
- 3/4 Hose Clips
- 1/2 Hose Clips

\* Please note some sink outlet sizes may vary, check your sink waste is compatible with 3/4 ID pipe

Treat the tap as a 12v inline switch between the live feed from the pump to the battery.  
The negative goes directly to the negative on the battery.

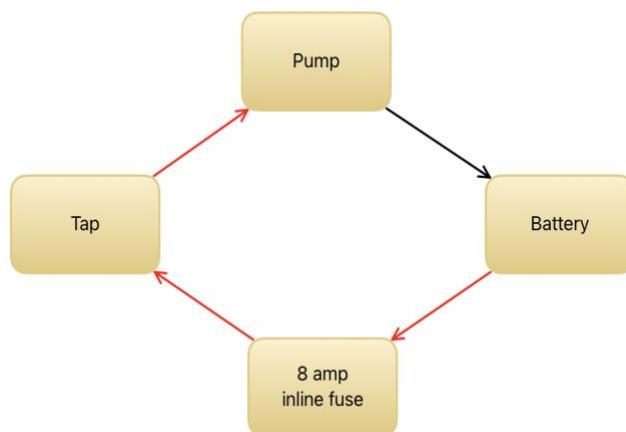

**DO NOT WIRE DIRECTLY TO A BATTERY ALWAYS USE AN 8AMP IN LINE FUSE.**

**Note this tap is a switch that must not be wired only to a battery, if wired this way it will short out and blow the switch.**

**To wire the tap always use an 8AMP inline fuse with a single wire between the battery to tap, a single wire between the tap to the pump and a single wire from the pump to the battery.**

**The mounting hole diameter for the tap if being fitted into a worktop is 22mm**

